

FIFO

FIFO RS232 / USB-Com **deaktivieren**



FIFO RS232 / USB-Com **aktivieren** (Default)

